


# Quick Start

## 1 Included Items

- 🔍 This list is for reference only, some models of large screens have a magnetic lens privacy cover. The appearances of the components may differ from those included upon delivery. The components in this package can be used only with the display in this package. If a component is damaged, missing, or wet upon being removed from the box, contact technical support.

Display box

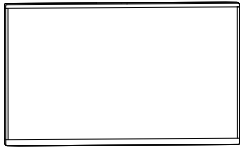

 
Display



Quick Start



Power cable  
(3 m)



Stylus pens (2)

## 2 Installation Description

If you purchase rolling stands, install the device by referring to [Quick Start \(Floor-Mounted\)](#) in the package.

If you purchase wall-mount bracket, install the device by referring to [Quick Start \(Wall-Mounted\)](#) in the package.

- 🔍 1. Install the device on a vertical, load-bearing solid wall or concrete wall with more than 20 cm thickness. To install the device on other types of walls, reinforce the walls and verify the feasibility before installation. Verification method (for reference only): After installing the wall-mount bracket, perform a four-fold, one-minute load test on it (260 kg, 200 kg, and 160 kg for the 86-inch, 75-inch, and 65-inch models respectively). Ensure that screws are not loose or deformed after the test.
2. In recessed wall mount scenarios, reserve a 100 mm gap for heat dissipation between the display edge and recessed wall edge.

⚠️ You are advised not to use brackets that are not certified by us for installation.

Different models differ slightly in appearance. The appearances of the device and accessories in this document are for reference only.

Some models of large screens have a magnetic lens privacy cover. To avoid magnetic interference, you are advised to place the lens privacy cover on either side of the large screen.

- 🔍 Take and place all components gently to prevent them from falling.

⚠️ At least two, three, or four persons are required to lift and install a 65-inch, 75-inch, or 86-inch device respectively.

## 3 Connecting Cables



 The port type and quantity vary depending on the host model. This part describes only common ports.

|                                                                                    |                      |                                                                               |
|------------------------------------------------------------------------------------|----------------------|-------------------------------------------------------------------------------|
|   | Power port           | Connects the power cable after powering off the device.                       |
|   | USB Type-A port      | Connects to a device such as a USB flash drive or IdeaShare Key.              |
|   | USB Type-B port      | Connects to a presentation source for reverse control.                        |
|   | USB Type-C port      | Connects to a presentation source for projection and reverse control.         |
|   | LINE IN and LINE OUT | Connects to 3.5 mm audio input and output devices.                            |
|   | HD-AI port           | Connects to an HD audio device.                                               |
|   | HDMI IN port         | Connects to a presentation source for projection.                             |
|   | HDMI OUT port        | Connects to a display or projector for dual-screen extension.                 |
|   | COM port             | Connects to a network port connector to define RS232/RS422 interface signals. |
|   | LAN port             | Connects the network cable.                                                   |
|  | TOUCH port           | Connects to the Touch.                                                        |

## 4 Powering On the Device

 When transporting a device from a low-temperature area to a high-temperature area, do not operate the device for a period of time until the dew is fully distributed, and then start the device.

After the power supply is connected, set the power switch of the display to **ON** and observe the indicator status.

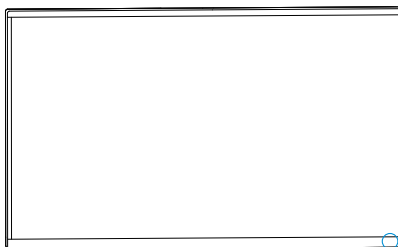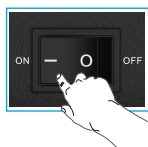

If the status indicator is abnormal, contact technical support.

| Indicator | Blinking green<br>(2 blinks/second) | Rapidly blinking green<br>(4 blinks/second) | Steady green | Breathing light, blinking green, gradually brighter or dimmer | Blinking red       | Off         |
|-----------|-------------------------------------|---------------------------------------------|--------------|---------------------------------------------------------------|--------------------|-------------|
| Status    | Starting                            | Upgrading                                   | Running      | Sleep                                                         | Abnormal or faulty | Powered off |

## 5 Configuring the Device

Upon first power-on of the device, follow instructions on the touchscreen UI to configure the device.

By default, no password is required for accessing the **Advanced** screen. After the device is started for the first time or restored to factory settings, choose **Settings > Advanced > Security > Advanced Password** in the lower right corner of the home screen to configure a password.

### Statement on a Class A Product

Warning: Operation of this equipment in a residential environment could cause radio interference.



### Angaben zu einem Produkt der Klasse A

Warnhinweis: Der Betrieb dieses Geräts bzw. dieser Einrichtung kann im Wohnbereich Funkstörungen verursachen.

### Wi-Fi

- Frequency bands: 2.4 GHz and 5 GHz
- Working frequency ranges: 2.4 GHz to 2.4835 GHz, 5 GHz to 5.85 GHz
- Max transmission power: less than 20 dBm at 2.4 GHz and less than 23 dBm at 5 GHz (Applicable only to models that support the Wi-Fi function)



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

### Disposal and Recycling Information



This symbol on the device and any included batteries indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. They should be handed over to a certified collection point for recycling or proper disposal when they can no longer be used. For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device. The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) Directive of the European Union. The purpose for separating WEEE and batteries from other waste is to minimize any environmental impact and health hazards due to the presence of hazardous substances.

### Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorization and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2011/65/EU & (EU) 2015/863 of the European Parliament and of the Council).